

Ladder and Hoist Anchor

Contains: 2 - 1"x 34" Straps with zinc plated hardware

Improve job site safety by securing extension ladders and TranzSporter tracks sections using the Roof Zone Ladder Anchor. Prevents
extension ladders
and track sections
from lateral or
side to side
movement.

Part #13809



Ladder and Hoist Anchor



Complete Installation Instructions on Inside Panel



TIE DOWN ENGINEERING www.tiedown.com 255 Villanova Drive SW Atlanta, Georgia 30336 © 2014 TIE DOWN Inc.

Made in China



sections using the Roof Zone

extension ladders and track

sections from lateral or side

Ladder Anchor. Prevents

to side movement.



Roof Zone Ladder and TranzSporter Track Anchor Part #13809

Improve job site safety by securing extension ladders and TranzSporter tracks sections using the Roof Zone Ladder Anchor. Prevents extension ladders and track sections from lateral or side to side movement.

Enhance your safety by using in conjunction with Roof Zone #48589 ladder stabilizer/stand-off or TranzSporter #48599 platform hoist stabilizer.

Roof Zone Ladder Installation Instructions

- 1. Position ladder according to mfg specifications with a minimum of 3 ft. above the eave of the roof.
- 2. With ladder level and at proper angle, climb safely to a level just above the roof eave.
- 3. Place strap against the rung, feed the anchor plate through the loop end so that it captures the rung then tighten snugly. Make sure that both straps are close to the ladder side rail.
- 4. Extend ladder strap with anchor plate behind the ladder side rung to an anchor point on the roof. Locate the nearest rafter to secure the anchor plate
- Install a nail or deck screw on the roof decking underneath shingle tab and into the nearest rafter. Leave head slightly raised so key slot can slip over.
- Place anchor plate over nail through the key slot on both straps. Nail or screw down. Once firmly attached to the roof. Tighten slack on strap.

For TranzSporter Platform hoists, read manual for proper track set up and angle. Use extension ladder, do not climb track for installation. Make sure that the strap stays clear of the carriage at all times by attaching to the rung, close and under the rails.

TECHNICAL DATA

- Safe Load limit: 50 pounds
- Strap is 1 inch x 34 inches (includes anchor plate)
- Anchor plate has rolled edge to prevent strap wear and zinc plated for long life.
- Inspect prior to each use for damage, if strap becomes frayed or cut, discard.
- Use 10 d Common Nail or 3" Deck Screw for securing Anchor Plate.
- Fastener (nail or screw) must solidly penetrate Roof rafter for assured holding power.
- Buckle is adjustable, inspect prior to each use for proper tension.
- Two strap anchors required per each extension ladder or track section.
- Check all Federal, State, and local OSHA rules and regulations prior to use.



Roof Zone is a Division of TIE DOWN ENGINEERING www.tiedown.com

255 Villanova Drive SW • Atlanta, Georgia 30336

© 2014 TIE DOWN Inc. Made in China