
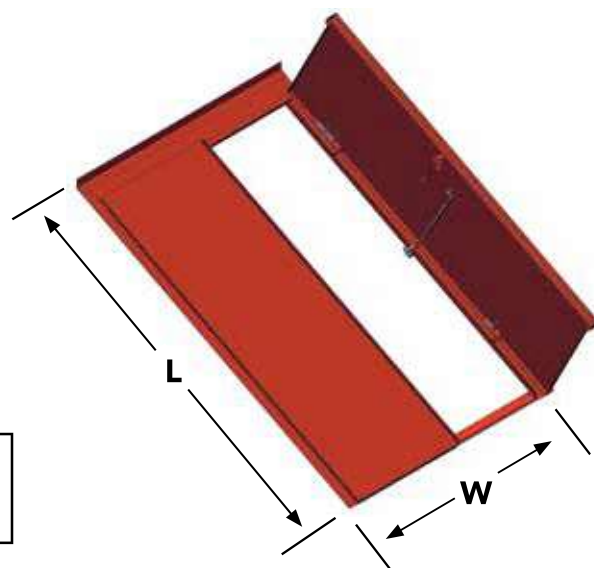


Log on to **www.BILCO.com** to find a sales representative near you.

Areaway — Sloped Masonry

Type BR Sloped Wall Door

1. Discard your old door and measure the dimensions of the areaway foundation as shown.
2. Measure dimension W1, the inside width, and W2, the outside width of the foundation sloped sidewalls. Walls may not be uniformly spaced, so check at several points for the narrowest dimension.
3. Measure dimension L1, the inside length, and L2, the outside length of the areaway foundation.
4. Select a door width that is at least 4" wider than W1 and no wider than W2. (Note: BILCO foundation plates are available to reduce the width of your foundation opening. See page 7 for more information).
5. Select a door length that is at least 2" longer than L1 and no longer than L2. (Note: BILCO extension panels are available to increase the length of the basement door. See below for more information).

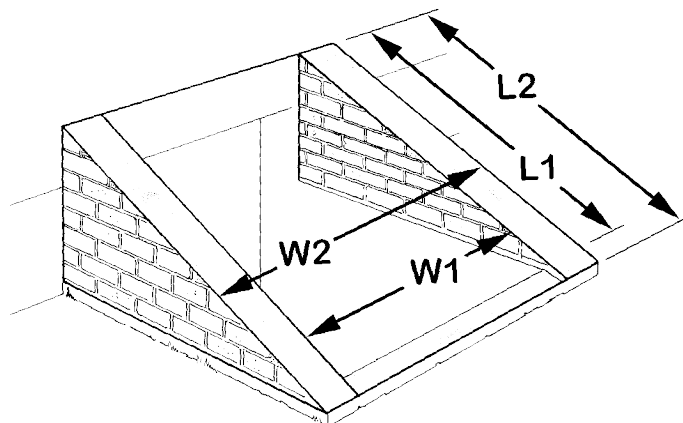

Record your foundation dimensions here

Width	
W1 = _____	W2 = _____


Length	
L1 = _____	L2 = _____

Sloped Wall Basement Door Dimensions

Model	Door Width	Door Length			
		Standard	With Extensions*		
			6" Panel	12" Panel	18" Panel
BR-1	43-3/16"	65-1/8"	70-1/8"	76-1/8"	82-1/8"
BR-2	47-3/16"	67-5/8"	72-5/8"	78-5/8"	84-5/8"
BR-3	51-3/16"	74-1/2"	79-1/2"	85-1/2"	91-1/2"

*Extension panels must overlap the door's head panel by at least 1".

Extensions are available to increase the door length in 6", 12", and 18" sizes. Two or more extensions can be overlapped to make longer extensions. Note: Extension panels must overlap the door's header panel by a least 1". Refer to table above for door lengths with extension panels.

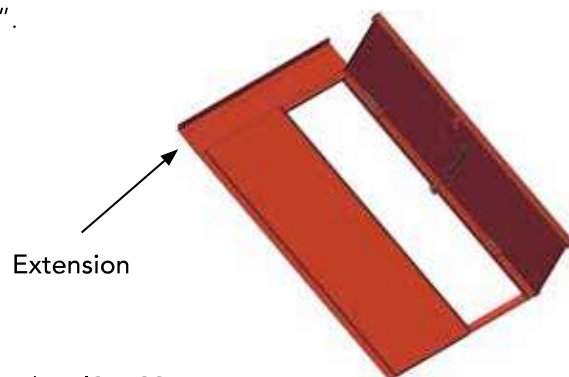

Contact us by phone: 800.854.9724 or email: residential@BILCO.com