


# Keystone Installation Instructions

---

Kit Contains: (4) Keystones  
(4) Screw Pocket Covers  
(4) Mounting Screws

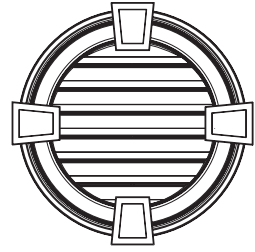

---

## Step 1

Keystones are attached after the gable vent has been installed and the finish trim ring has been locked on the vent. Place the first Keystone at the top of the vent in the 12 o'clock position. Keystones are designed to overlap the finish ring. If the trim ring is set at the outermost position on the vent the Keystone may need to be trimmed. To trim the Keystone simply use a utility knife and follow the guide lines provided on the underside of the Keystone.

## Step 2

Using one of the mounting screws provided, fasten the Keystone to the vent through the hole provided in the Keystone

## Step 3

After the Keystone is attached, place the cover over the screw pocket by flexing it until it slips into the slots of the Keystone. Be sure that the textured surface of the cover is facing out.

## Step 4

Place the remaining Keystones at the 3, 6, and 9 o'clock positions on the vent and repeat steps 1 through 3.