
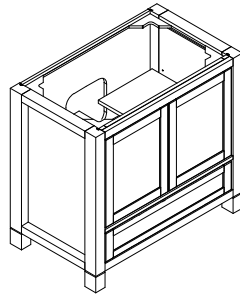

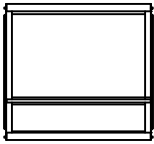

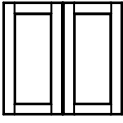
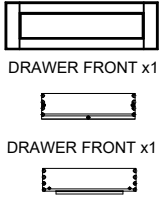


Base Cabinet ASSEMBLY INSTRUCTIONS

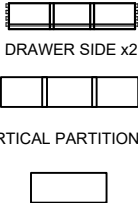

LANGMORE VANITY 42" - 36" - 30"

Item quantity and hardware list.

①  END CAP LEFT & RIGHT x2	②  FACE FRAME x1	③  BACK FRAME x1	④  BOTTOM x1	⑤  CENTER SHELF x1	⑥  SHELF x1
⑦  DOOR x2	⑧  DRAWER FRONT x1 DRAWER FRONT x1 DRAWER BACK x1	⑨  DRAWER SIDE x2 VERTICAL PARTITION x1 HORIZONTAL PARTITION x4	⑩  DRAWER BOTOM x1	⑪  CORNER x4	
⑫  HINGE OVERLAY 1" x4	⑬  0,47" Flat head screw x8 (To install the hinges on the door)	⑭  0,75" Flat head screw x4 (To install the hinges on the front frame)	⑮  18" Self close slide x1	⑯  0,75" Flat head screw x2 (To install the slide on the front frame)	⑰  Locking Device x2
⑱  0,5" Flat head screw x4 (To install the devices on the drawer front)	⑲  0,31" Flat head screw x2 (To install the devices on the bottom drawer)	⑳  Rear Clips x2	㉑  0,31" Flat head screw x4 (To install the Rear Clips on the back panel)	㉒  1,18" Flat head screw x11 (Asemble drawer box)	㉓  Shelf Supports x4

Note:


Remove hardware from box and sort by size

Please check to see that all hardware and parts are resent prior start of assembly

Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.


Please keep all hardware out of reach small children.

Step 1

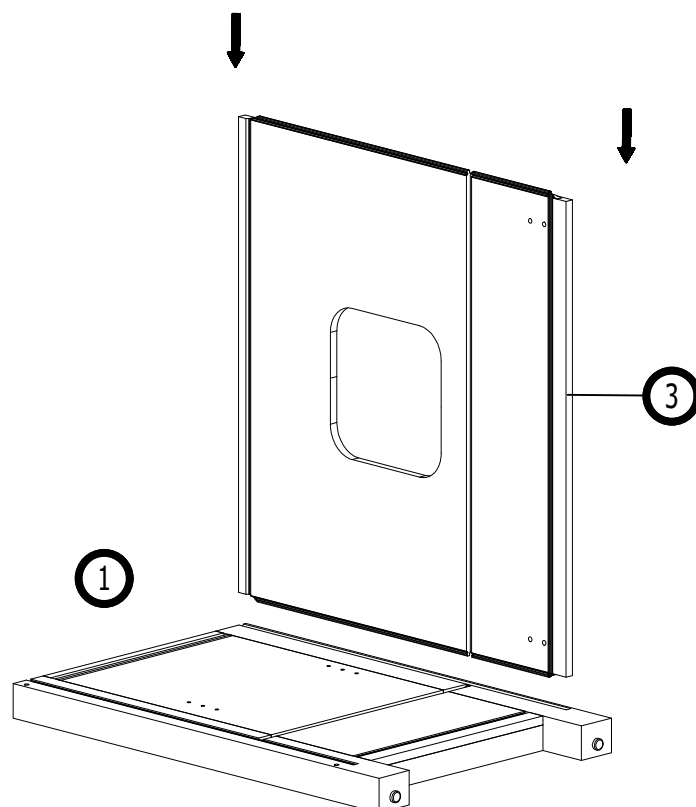


Insert the back frame(3) into the groove of the side frame(1) and click it into place.

Step 2

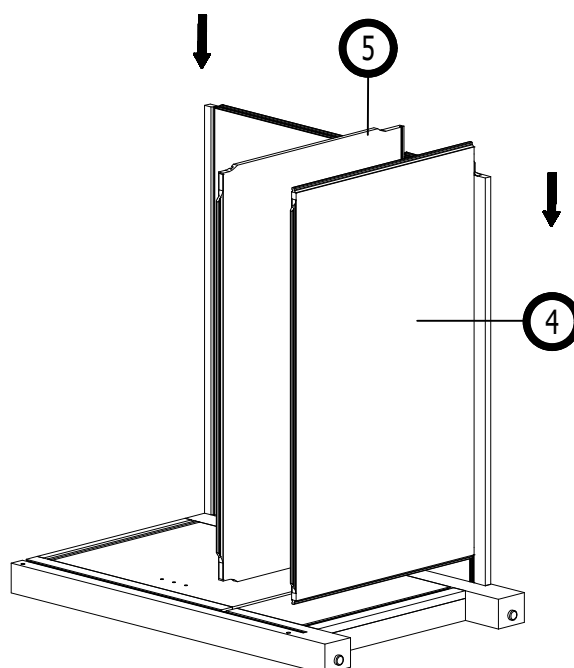


Insert the bottom panel(4), center shelf(5) into the groove of the side frame(1), back frame(3) and click it into place.

Step 3

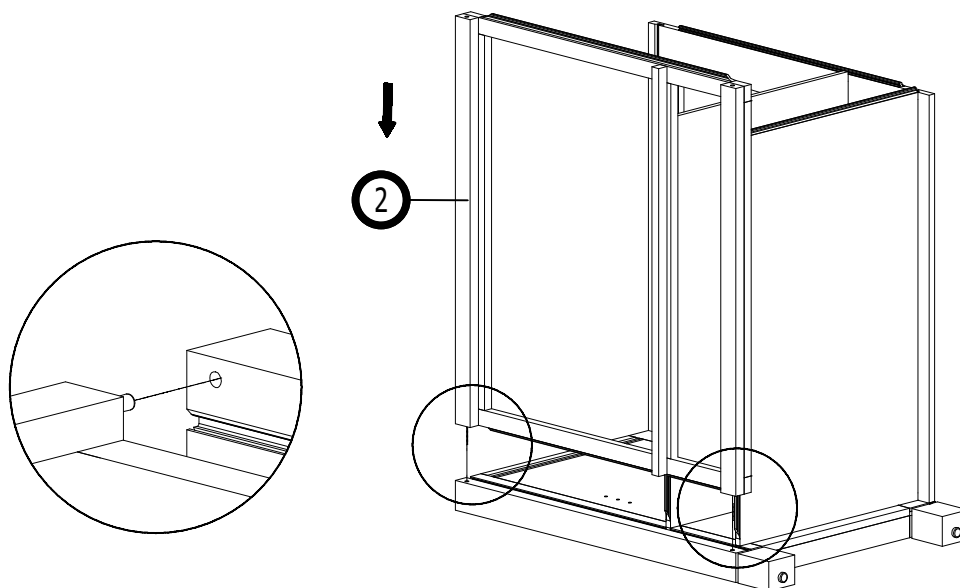


Insert the front frame(2 into the groove of the side frame(1), center shelf(5), bottom panel(4) and click it into place.

Step 4

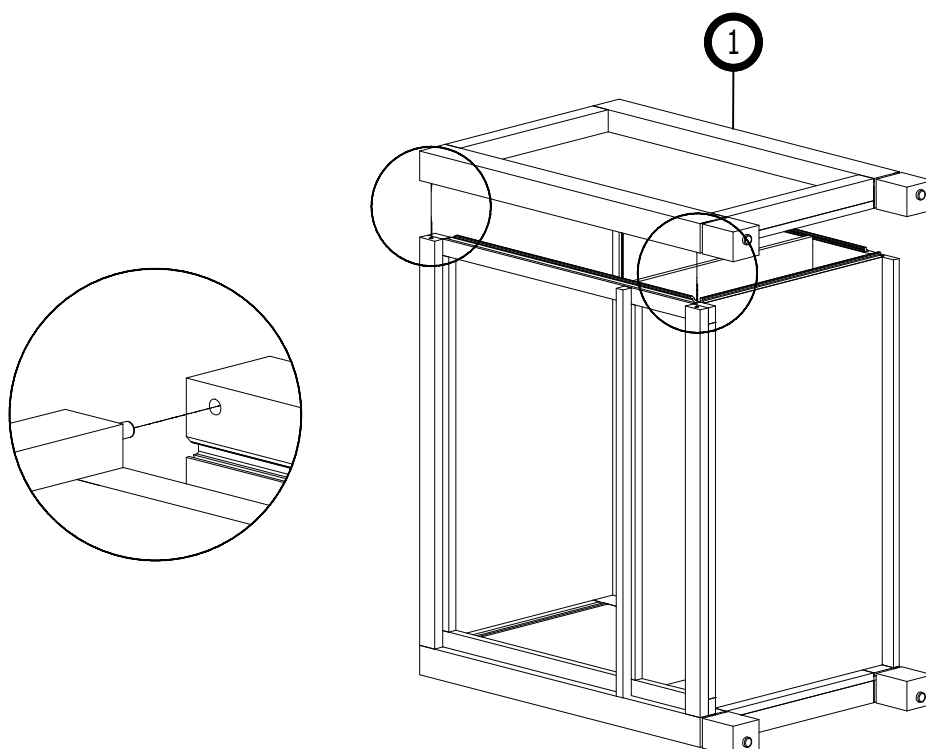


Insert the side frame(1) into the groove of the front frame(2), bottom panel(4), back frame(3), center shelf(5) and click it into place.

Step 5

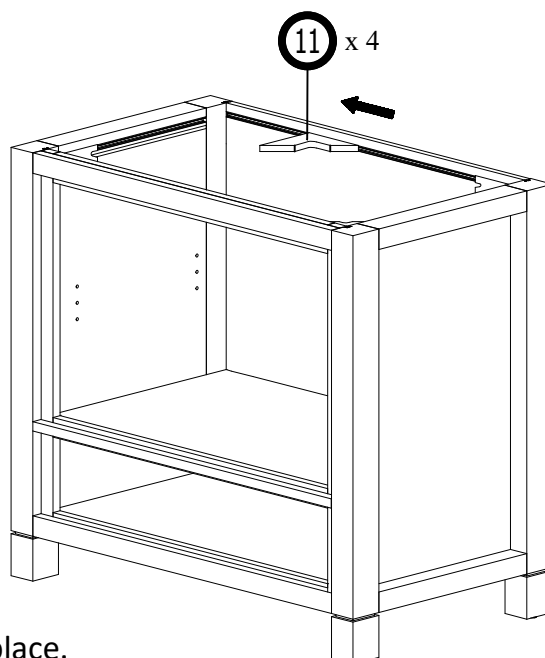


Insert the corner (11) into the side frame(1), front frame(2), Back frame(3) and click it into place.

Step 6

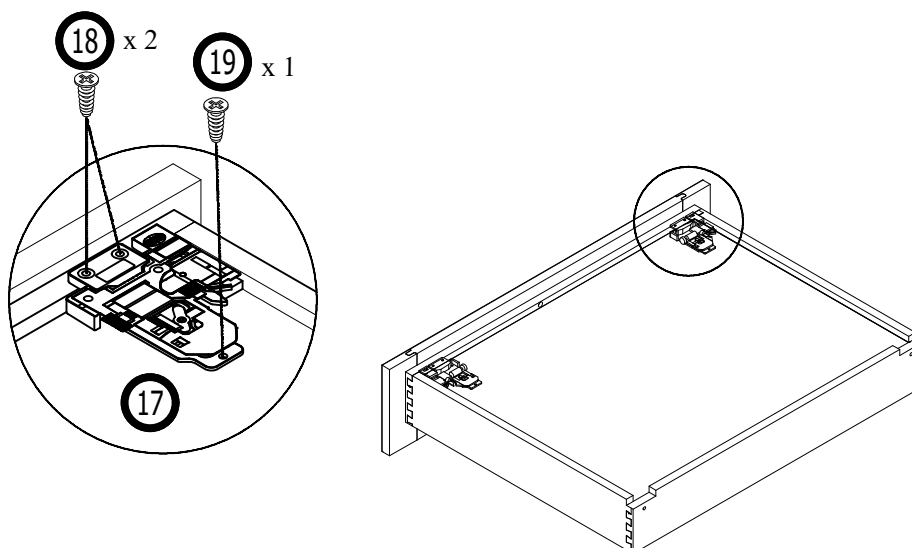


Installing the clamping device(17) onto the bottom of drawer box and assemble screw (18), (19)

Step 7

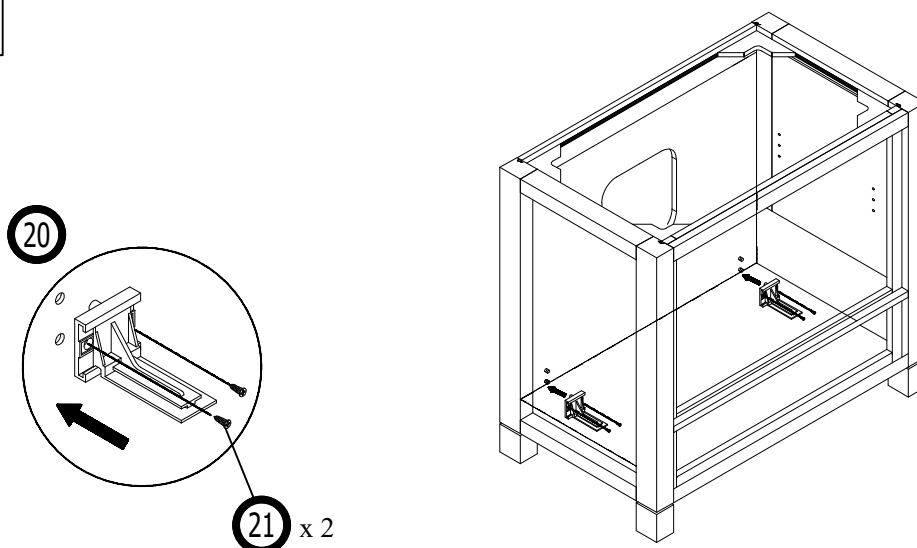


Installing the rear clips into the free hole on the back frame and assemble by screw

Step 8

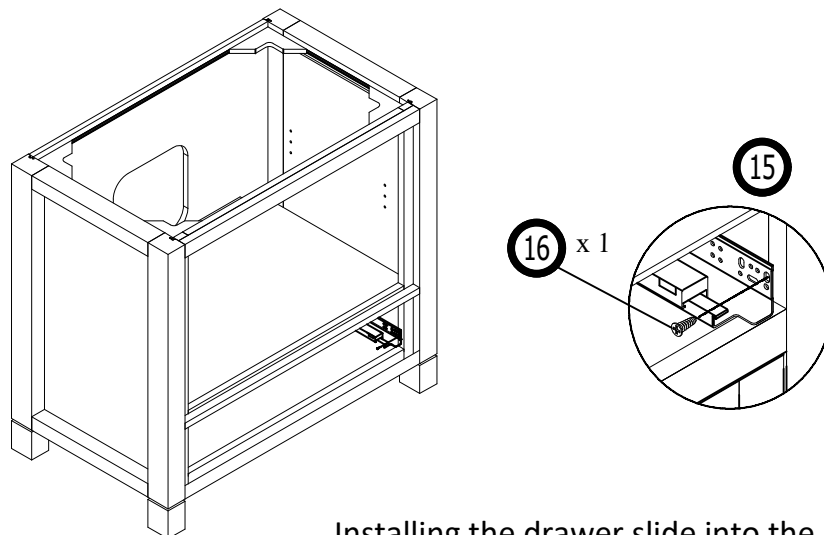



Installing the drawer slide into the rear clips on the back frame and assemble by screw with front frame

Step 9

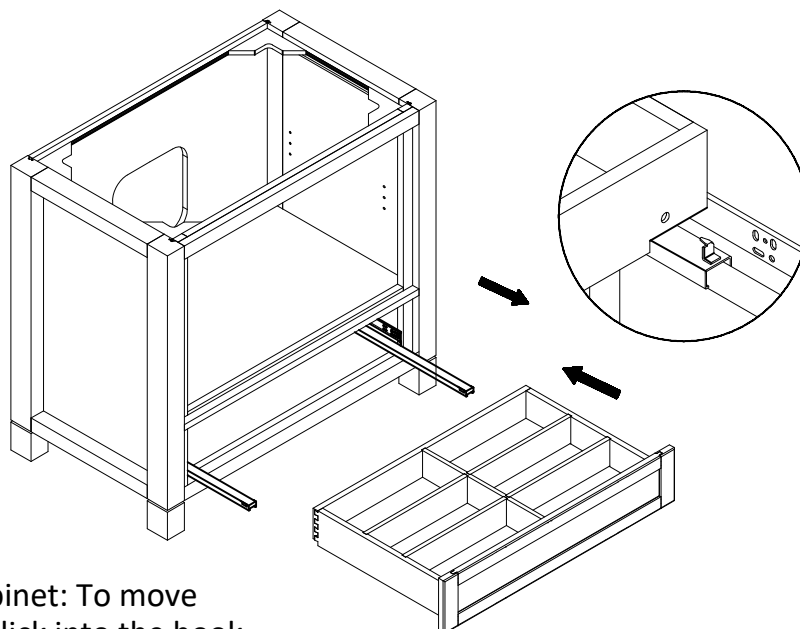


Installing the drawer into the cabinet: To move out the slide and put drawer to click into the hook of slide with the hole in back side of drawer back.

Step 10

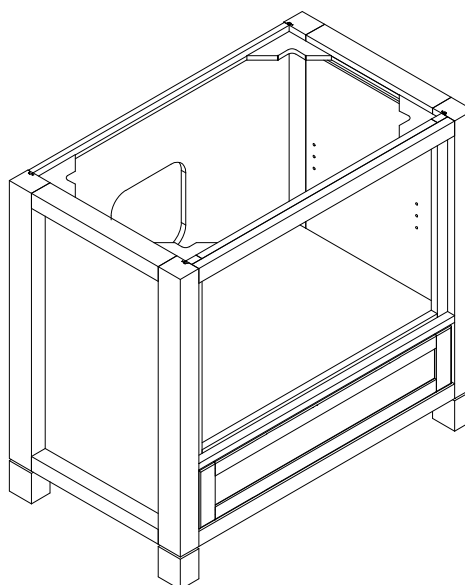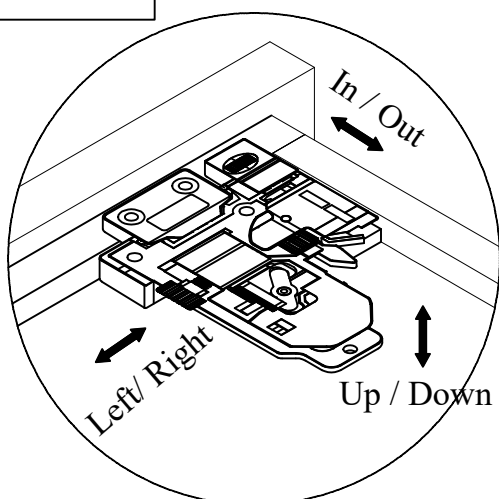


3D locking device can just the drawer up/down, left/Right or In/Out.

Step 11

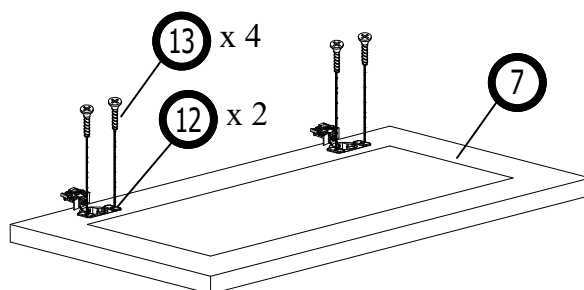


Installing the Hinges(12) into the door(7) and assemble screw (13).

Step 12

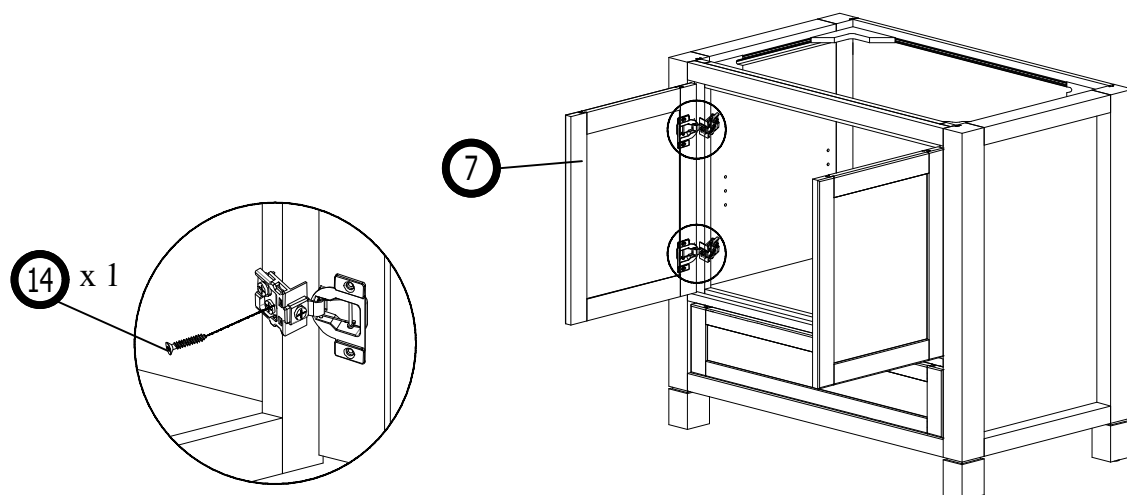

Installing the door (7) with hinges into the front frame of cabinet and assemble screw (14).


Step 13

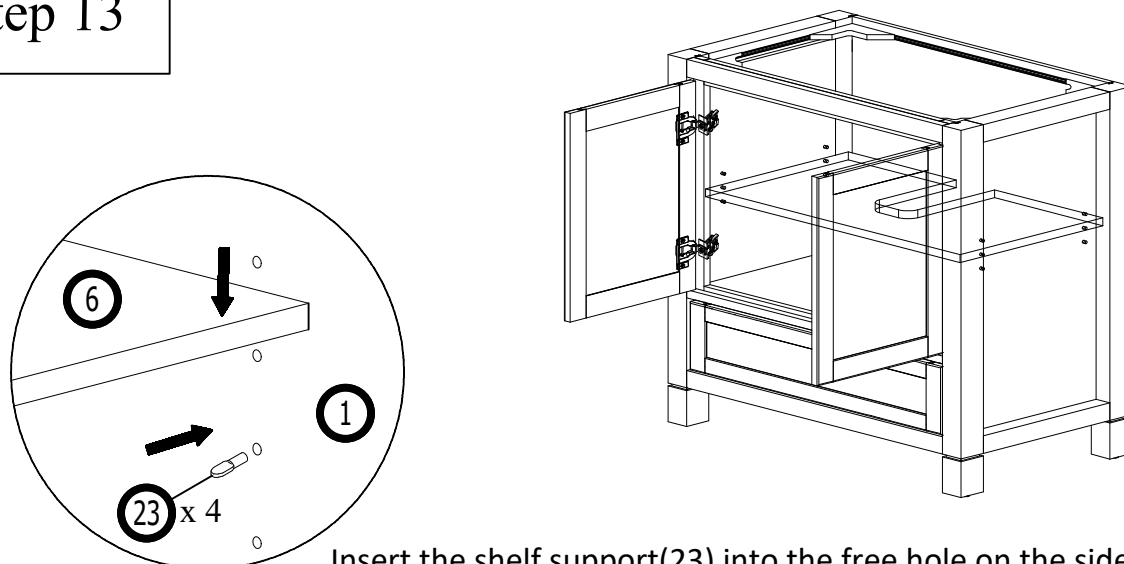


Insert the shelf support(23) into the free hole on the side panel of cabinet and installing the shelf (6) .

Step 17


Drawer -2(x2)

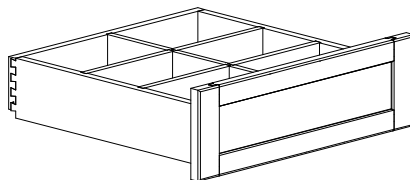


Step 17-1

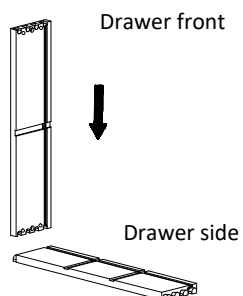


Step 17-2

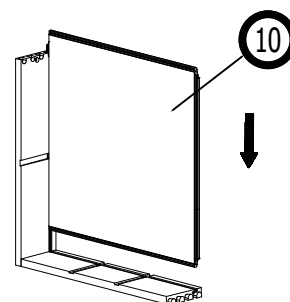


Step 17-3

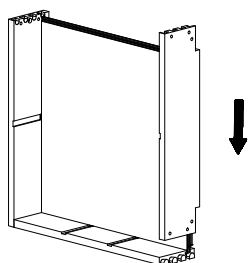


Step 17-4

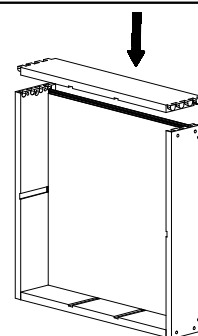


Step 17-5

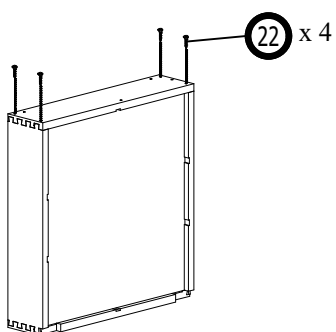


Step 17-6

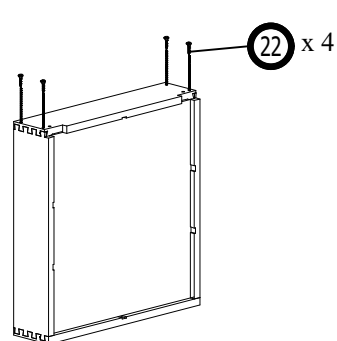


Step 17-7

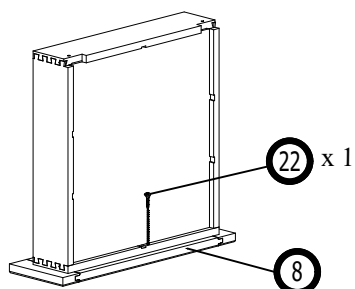

Step 17-8

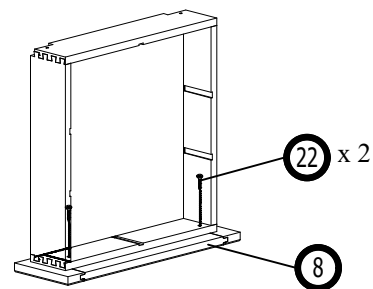

Step 17-9

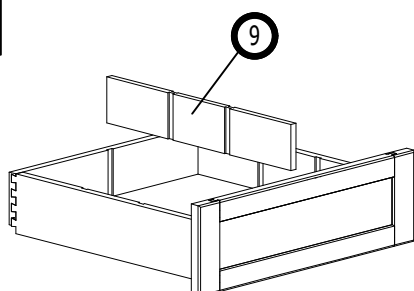

Step 17-10

