


Base Cabinet ASSEMBLY INSTRUCTIONS

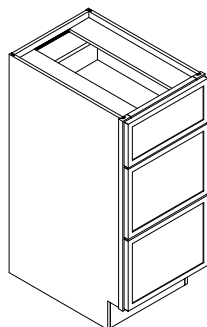

VDB122134 VDB152134
VDB182134

Item quantity and hardware list.

A LEFT SIDE PANEL x1 RIGHTT SIDE PANEL x1		B BACK PANEL x1	C BOTTOM x1	D TOE KICK x1	E FRONT FRAME x1
F TOP DRAWER FRONT x1	G SMALL DRAWER BOX FRONT x1 H SMALL DRAWER BOX BACK x1 I SMALL DRAWER SIDE x2	J CENTER AND BASE DRAWER FRONT x2	K LARGE DRAWER BOX FRONT x2 L LARGE DRAWER BOX BACK x2 N LARGE DRAWER SIDE x4	M DRAWER BOTOM x3	O CLEAT x2
a 18" Self close slide x3	b 20mm Flathead screw x6 (To install the slide on the front frame)	c Locking Device x6	d 15mm Flat head screw x22 (To install the divices and metal Bracket on the drawer front)	e 9mm Flat head screw x6 (To install the divices on the bottom drawer)	f Rear Clips x6
g 9mm Flat head screw x12 (To install the Rear Clips on the back panel)	h 25mm Flat head screw x20 (Assemble drawer box)	i Metal Bracket x10			


Note:

Remove hardware from box and sort by size

Please check to see that all hardware and parts are resnt prior start of assembly

Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.

Please keep all hardware out of reach small children.

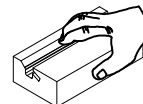



Note: Before assembly, please ensure that all plastic inserts are fully pushed in.

three spine

•Assembly is made fast and easy with ThreeSpine® click furniture technology.
•Patent Protected,
www.valinge.se/patents
•Produced under license from Vålinge Innovation.





Step 1

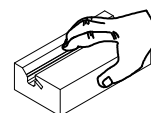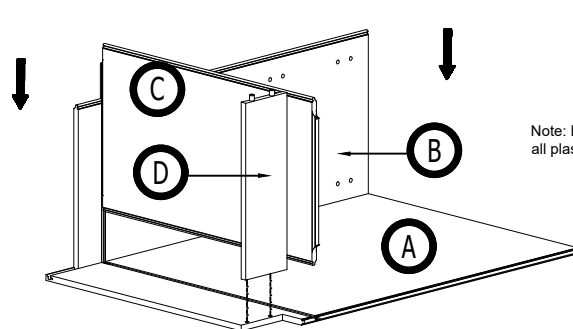

Note: Before assembly, please ensure that all plastic inserts are fully pushed in.

Insert the back panel (B), the bottom (C) and Toe kick (D) into the groove of the side panel (A) and click it into place.



Step 2

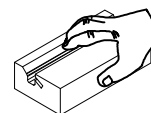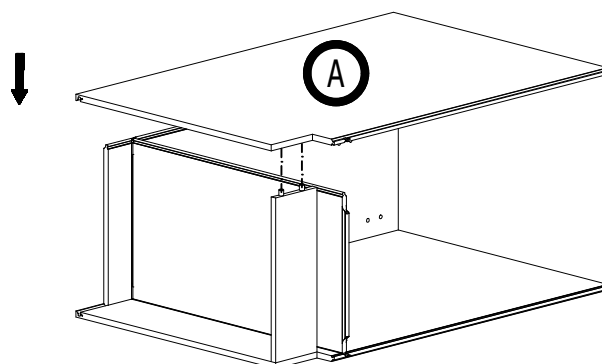

Note: Before assembly, please ensure that all plastic inserts are fully pushed in.

Insert the side panel (A) into the groove of back panel (B), the bottom (C) and Toe kick (D) and click it into place.


Step 3

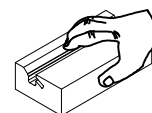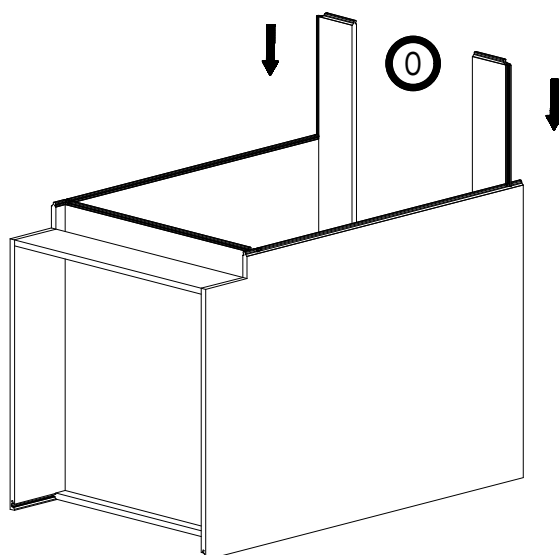

Note: Before assembly, please ensure that all plastic inserts are fully pushed in.


Insert the Cleats (O) into the groove of side panel (A) and back panel (B) and click it into place.

Step 4

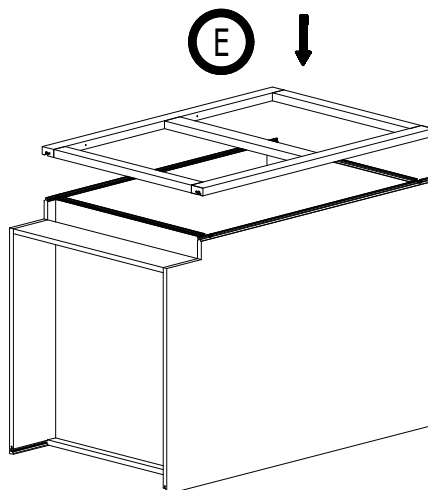


Insert the front frame (E) into the groove of the side panel (A), bottom (C) and cleat (O) and click it into place.

Step 5

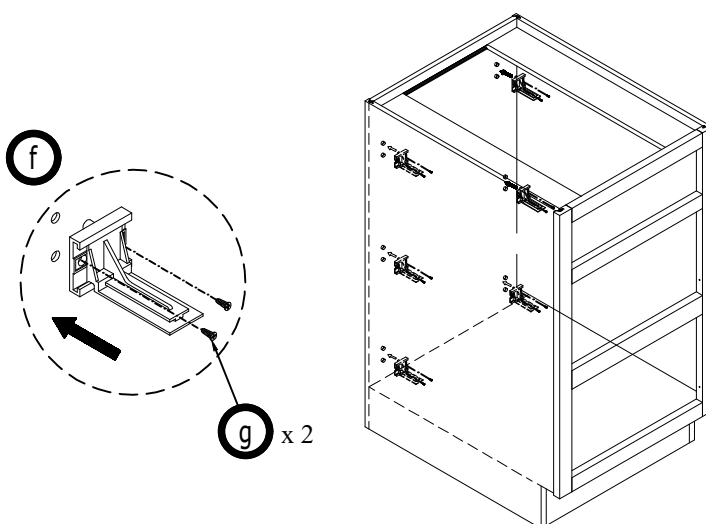


Installing the Rear Clips (g) into the hole on the back panel (B) and Assemble screw (f) .

Step 6

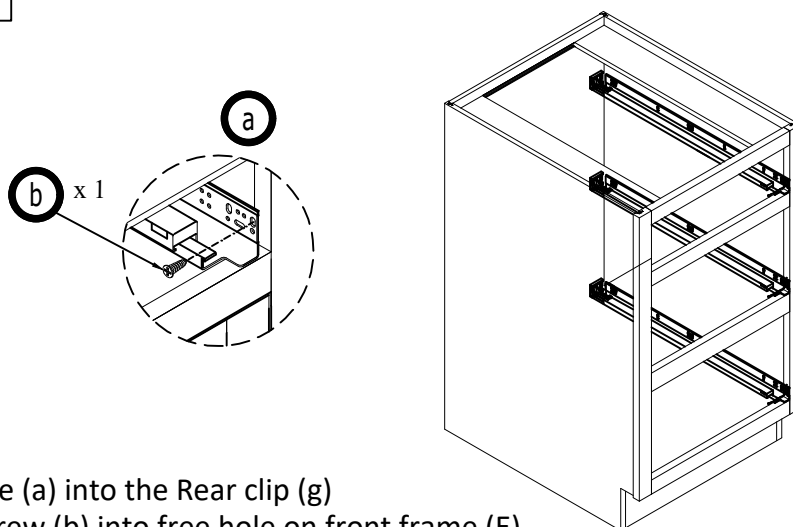

Installing the slide (a) into the Rear clip (g) and Assemble screw (b) into free hole on front frame (E).


Step 7

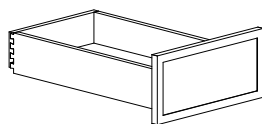

SMALL DRAWER x1

Step 7-1


Drawer front

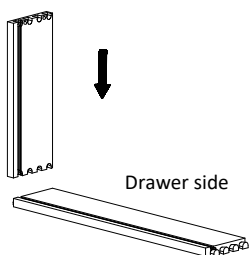

Drawer side


Installing the drawer front into the drawer side

Step 7-2

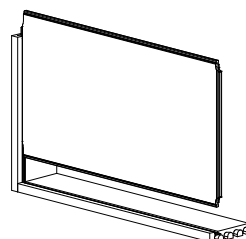


Installing the drawer bottom into the drawer side and drawer front and click it into place

Step 7-3

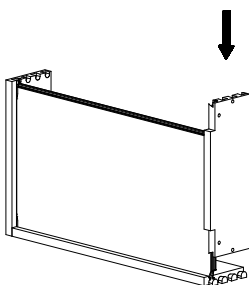


Installing the drawer back into the drawer side and drawer bottom .

Step 7-4

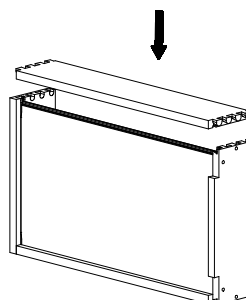


Installing the drawer side into the drawer front, drawer back and drawer bottom and click it into place.

Step 7-5

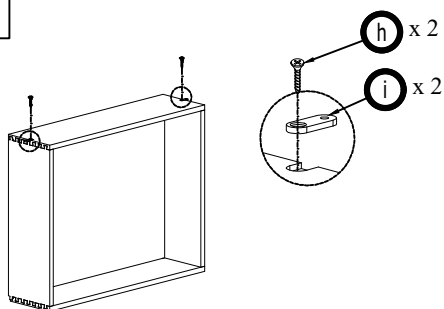


Assemble metal bracket (i) and screw (h) on drawer front to drawer side.

Step 7-6

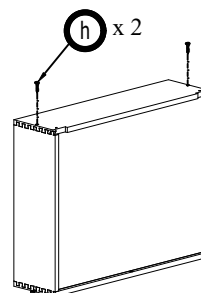

Assemble screw (h) on drawer back to drawer side.

Step 7-7

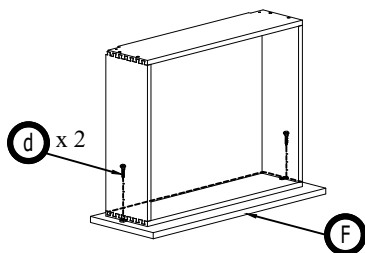


Assemble screw (d) on drawer box front to drawer front(F).




•Assembly is made fast and easy with ThreeSpine® click furniture technology.
•Patent Protected,
www.valinge.se/patents
•Produced under license from Vällinge Innovation.

Step 8

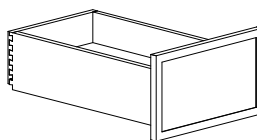


J LARGE DRAWER x2

Step 8-1

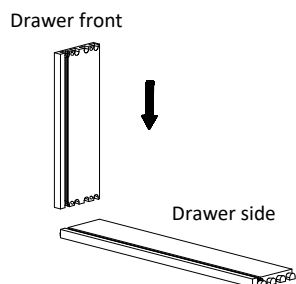


Installing the drawer front into the drawer side

Step 8-2

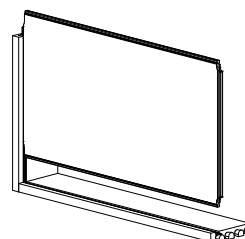


Installing the drawer bottom into the drawer side and drawer front and click it into place

Step 8-3

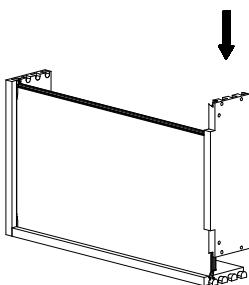


Installing the drawer back into the drawer side and drawer bottom .

Step 8-4

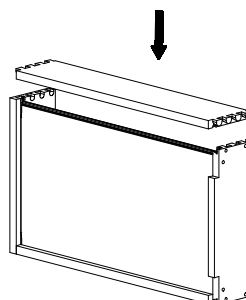


Installing the drawer side into the drawer front, drawer back and drawer bottom and click it into place.

Step 8-5

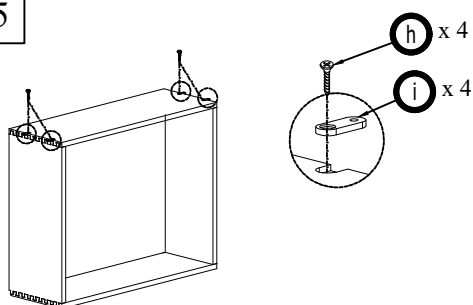


Assemble metal bracket (i) and screw (h) on drawer front to drawer side.

Step 8-6

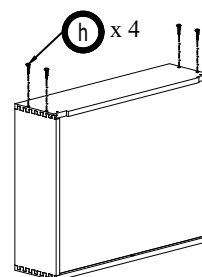

Assemble screw (h) on drawer back to drawer side.


Step 8-7

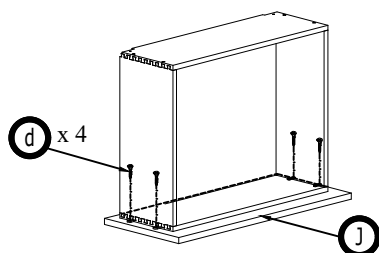

Assemble screw (d) on drawer box front to drawer front(J).




Step 9

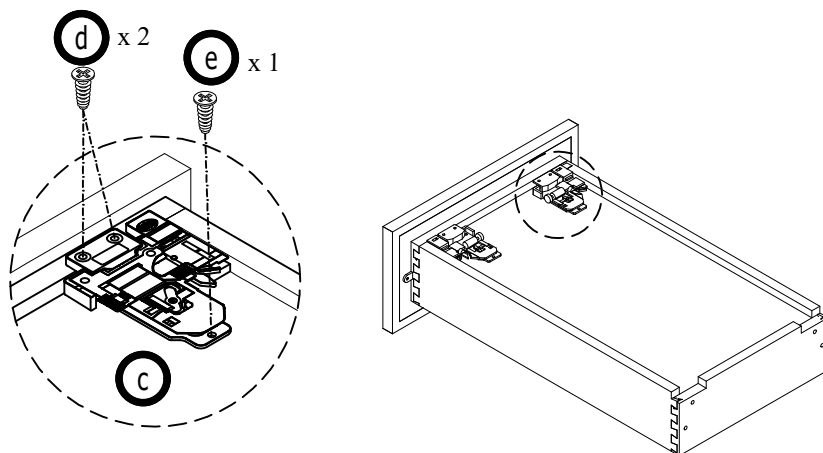


Installing the cloaking device(c) onto the bottom of drawer box and assemble screw (d), (e)

Step 10

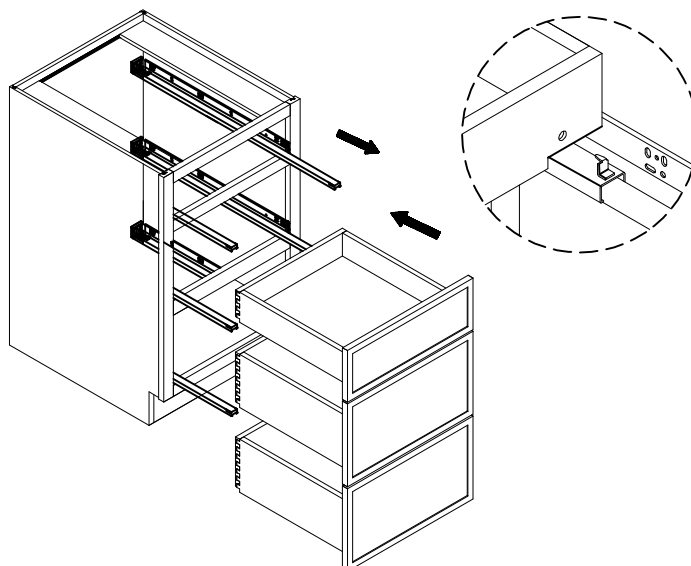

Installing the drawer into the cabinet: To move out the slide and put drawer to click into the hook of slide with the hole in back side of drawer back.

Step 11

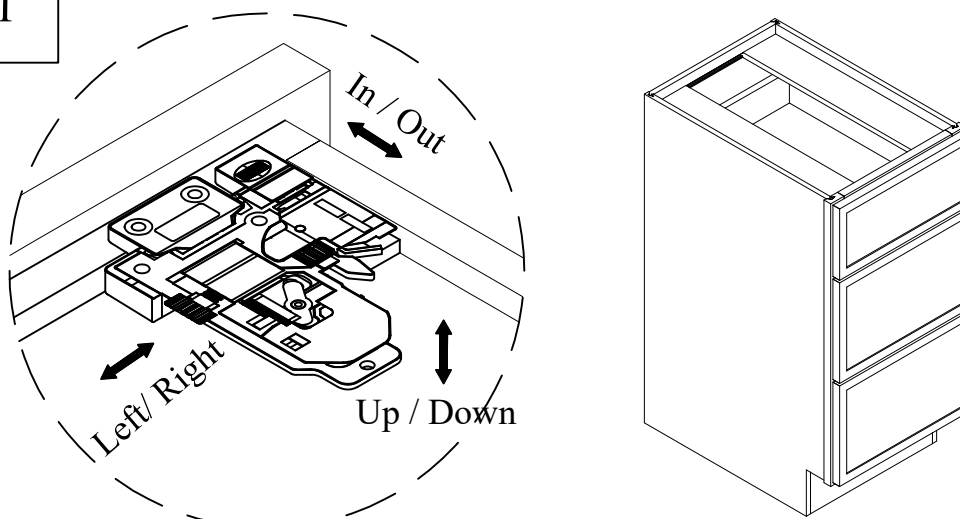

3D locking device can just the drawer up/down, left/Right or In/Out.