
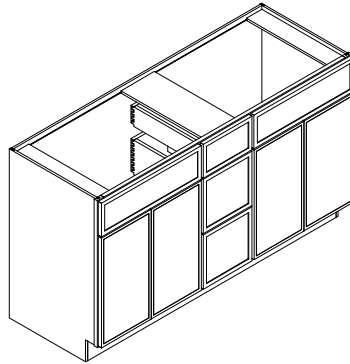









Base Cabinet ASSEMBLY INSTRUCTIONS



VDSB602134

Item quantity and hardware list.

A  LEFT /RIGHT SIDE PANEL x2	B  BACK PANEL x1	C  BOTTOM x1	D  FRONT FRAME x1	E  TOE KICK x1	G  CLEAT x2
F  DOOR x4	H  TOP CLEAT x1	I  SMALL DRAWER x1	J  SMALL DRAWER BOX FRONT x1	K  SMALL DRAWER BOX BACK x1	L  SMALL DRAWER SIDE x2
M  LARGE DRAWER x2	N  LARGE DRAWER BOX FRONT x2	O  LARGE DRAWER BOX BACK x2	P  DRAWER BOTOM x3	Q  DRAWER BOTOM x3	
a  HINGE OVERLAY 1-1/4" x8	b  12mm Flat head screw x16 (To install the hinges on the door)	c  20mm Flathead screw x8 (To install the hinges on the front frame)	d  18" Self close slide x3	e  20mm Flathead screw x6 (To install the slide on the front frame)	f  Locking Device x6
g  15mm Flat head screw x22 (To install the devices and metal Bracket on the drawer front)	h  9mm Flat head screw x6 (To install the devices on the bottom drawer)	i  Rear Clips x6	j  9mm Flat head screw x12 (To install the Rear Clips on the back panel)	k  25mm Flat head screw x20 (Assemble drawer box)	m  Metal Bracket x10


Note:

Remove hardware from box and sort by size

Please check to see that all hardware and parts are resent prior start of assembly

Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.

Please keep all hardware out of reach small children.




Note: Before assembly, please ensure that all plastic inserts are fully pushed in.

three spine


•Assembly is made fast and easy with ThreeSpine® click furniture technology.
•Patent Protected,
www.valinge.se/patents
•Produced under license from Vållinge Innovation.

Step 1

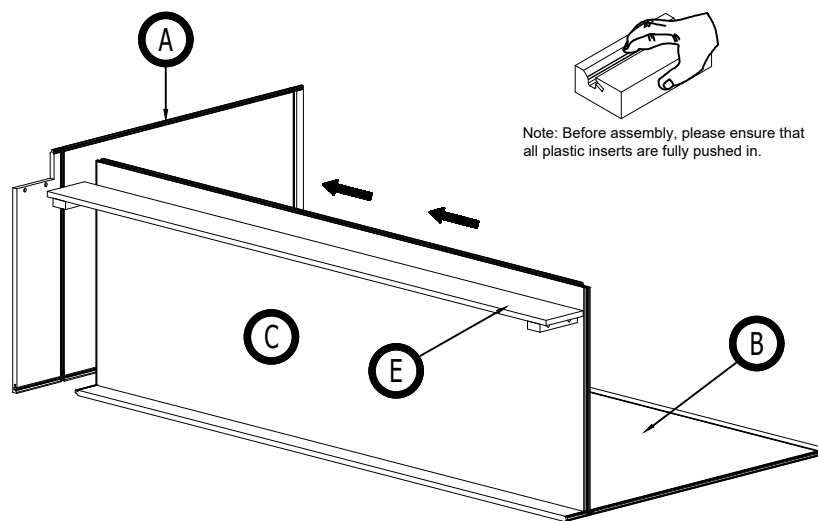

Insert the back panel (B), the bottom (C) and Toe kick (E) into the groove of the side panel (A) and click it into place.

Step 2

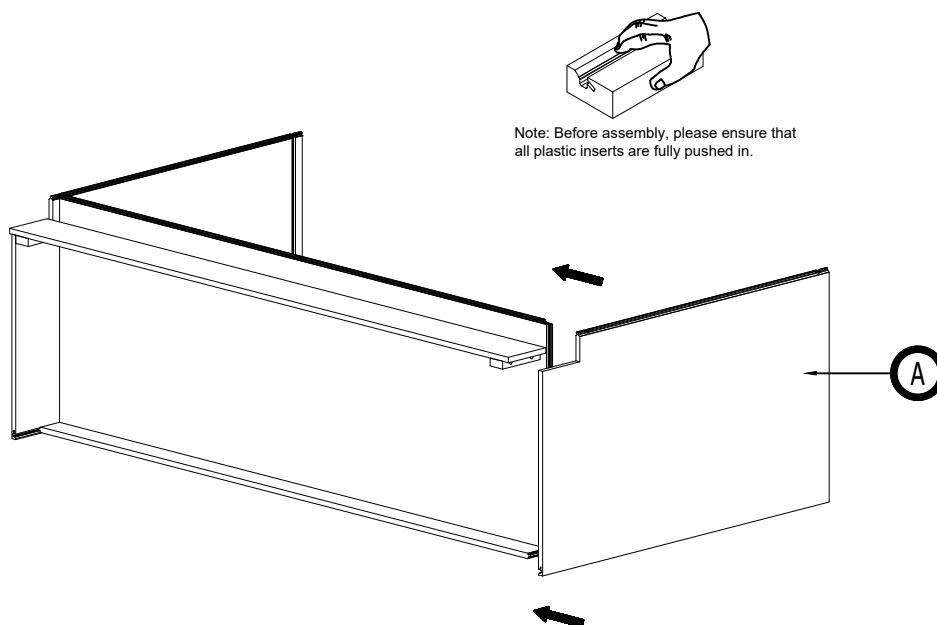


Insert the side panel (A) into the groove of back panel (B), the bottom (C) and Toe kick (E) and click it into place.

three spine

• Assembly is made fast and easy with
Threespine® click furniture technology.
• Patent Protected.
• www.valinge.se/patents
• Produced under license
from Vålinge Innovation.




Step 3

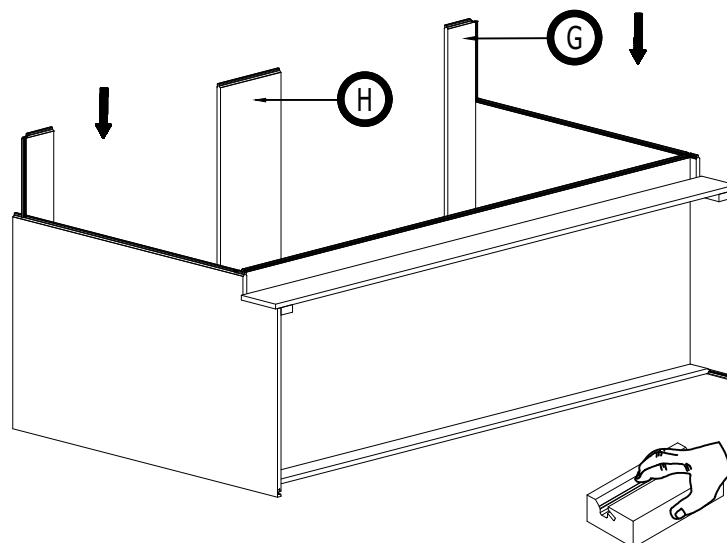

Note: Before assembly, please ensure that all plastic inserts are fully pushed in.


Insert the Cleats (G) and Top center cleat (H) into the groove of side panel (A) and back panel (B) and click it into place.

Step 4

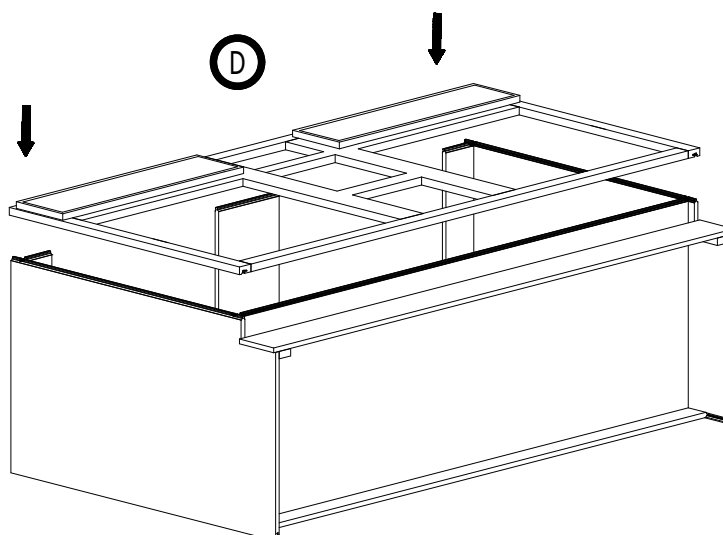


Insert the front frame (D) into the groove of the side panel (A), bottom (C) and cleat (G) and click it into place.

Step 5

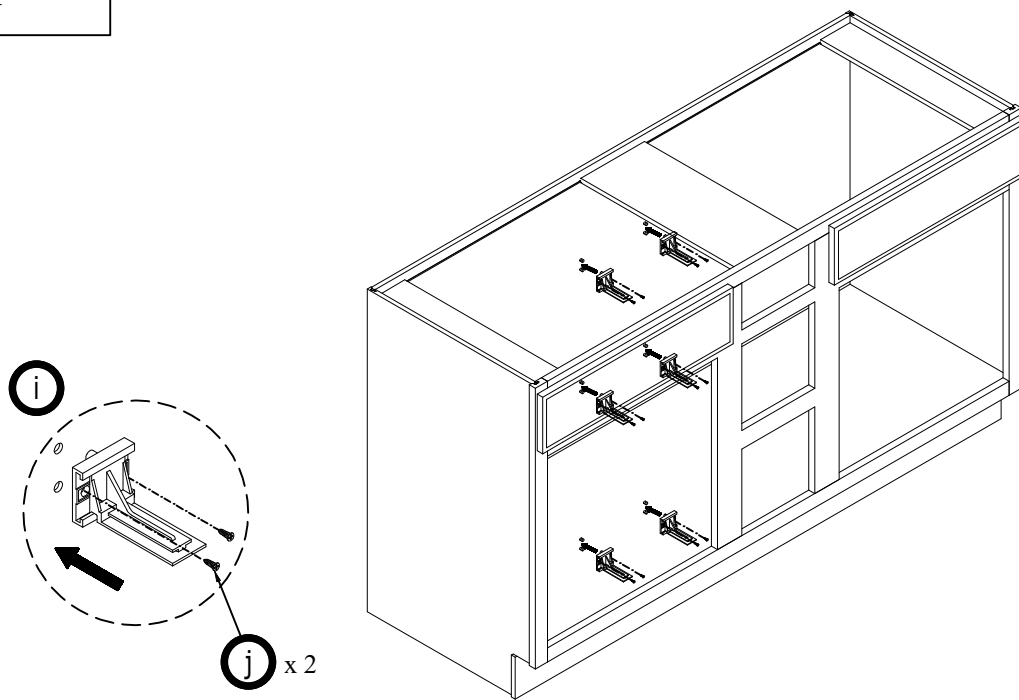

Installing the Rear Clips (j) into the hole on the back panel(B)
and Assemble screw (i) .

Step 6

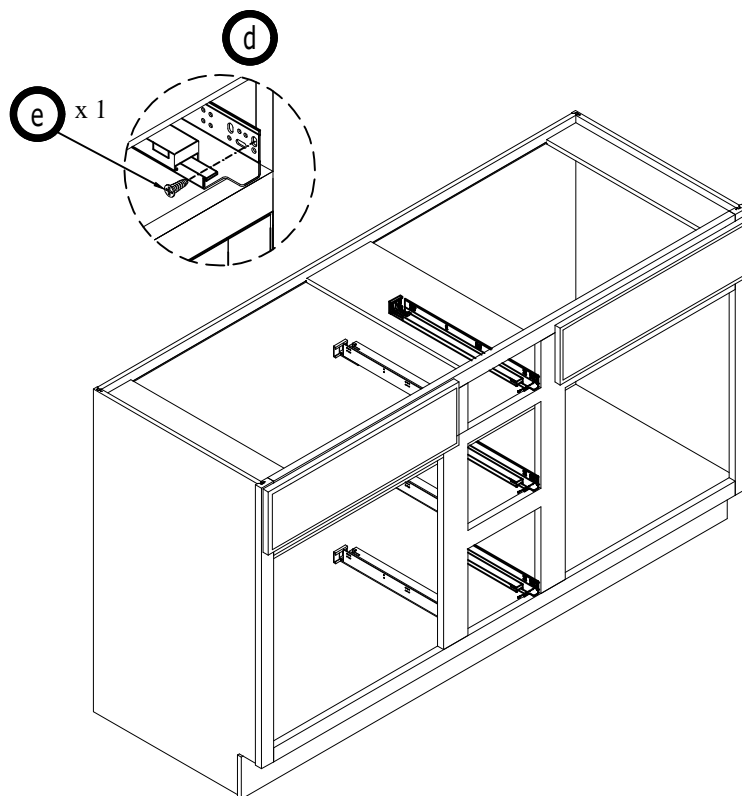


Installing the slide (d) into the Rear clip (j)
and Assemble screw (e) into free hole on front frame (D).



•Assembly is made fast and easy with
Threespine® click furniture technology.
•Patent Protected.
•www.valinge.se/patents
•Produced under license
from Vålinge Innovation.




Step 7

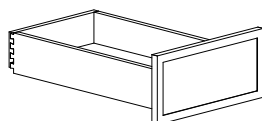

I SMALL DRAWER x1

Step 7-1


Drawer front

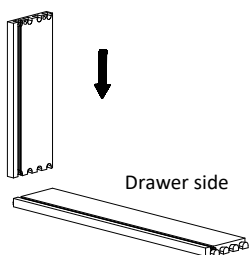

Drawer side


Installing the drawer front into the drawer side

Step 7-2

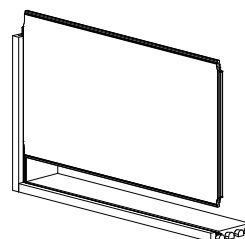


Installing the drawer bottom into the drawer side and drawer front and click it into place

Step 7-3

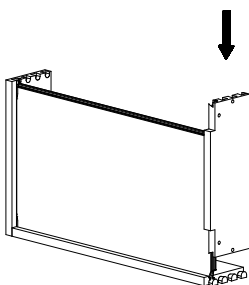


Installing the drawer back into the drawer side and drawer bottom .

Step 7-4

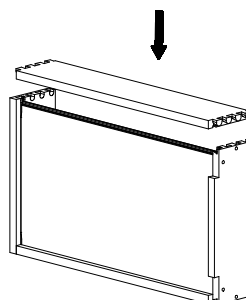


Installing the drawer side into the drawer front, drawer back and drawer bottom and click it into place.

Step 7-5

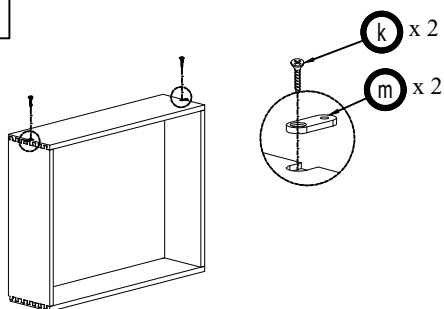


Assemble metal bracket (m) and screw (k) on drawer front to drawer side.

Step 7-6

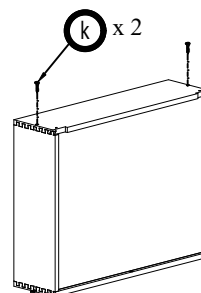

Assemble screw (k) on drawer back to drawer side.

Step 7-7

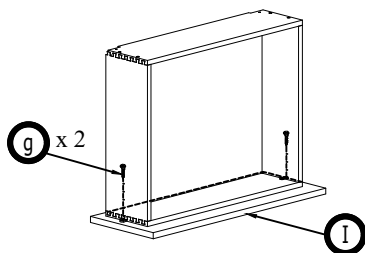


Assemble screw (g) on drawer box front to drawer front(I).

three spine


•Assembly is made fast and easy with ThreeSpine® click furniture technology.
•Patent Protected,
www.valinge.se/patents
•Produced under license from Vällinge Innovation.

Step 8

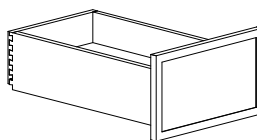


(M) LARGE DRAWER x2

Step 8-1

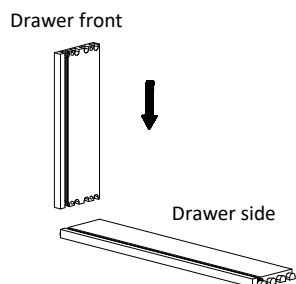


Installing the drawer front into the drawer side

Step 8-2

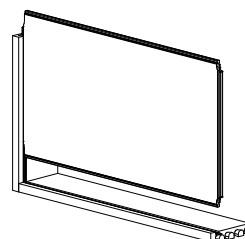


Installing the drawer bottom into the drawer side and drawer front and click it into place

Step 8-3

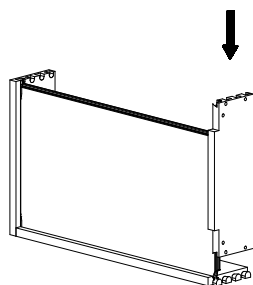


Installing the drawer back into the drawer side and drawer bottom .

Step 8-4

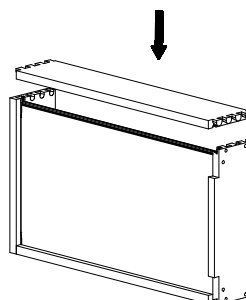


Installing the drawer side into the drawer front, drawer back and drawer bottom and click it into place.

Step 8-5

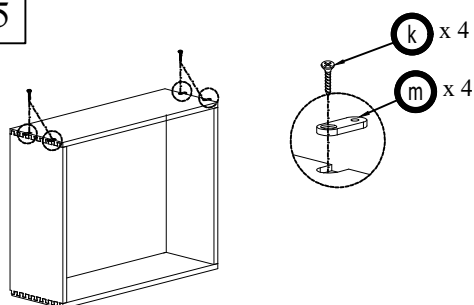


Assemble metal bracket (m) and screw (k) on drawer front to drawer side.

Step 8-6

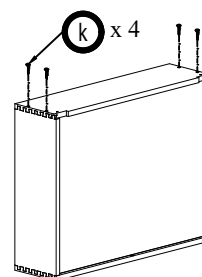

Assemble screw (k) on drawer back to drawer side.


Step 8-7

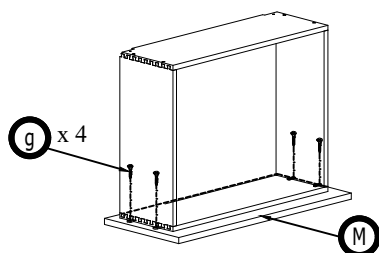

Assemble screw (g) on drawer box front to drawer front(M).




Step 9

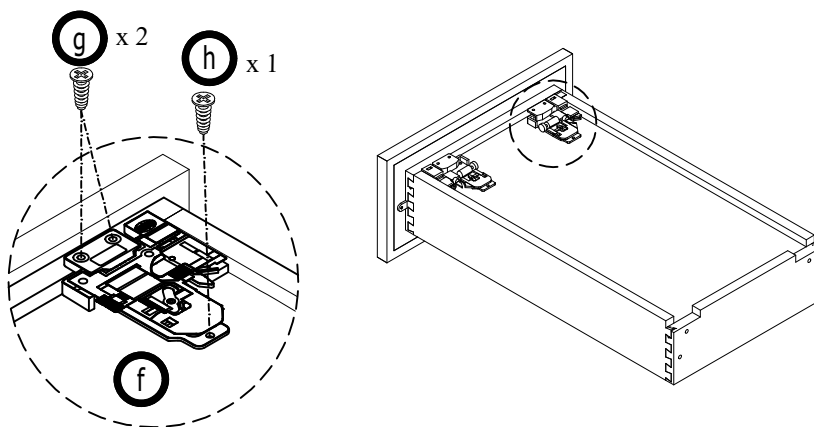



Installing the cloaking device(f) onto the bottom of drawer box and assemble screw (g), (h)

Step 10

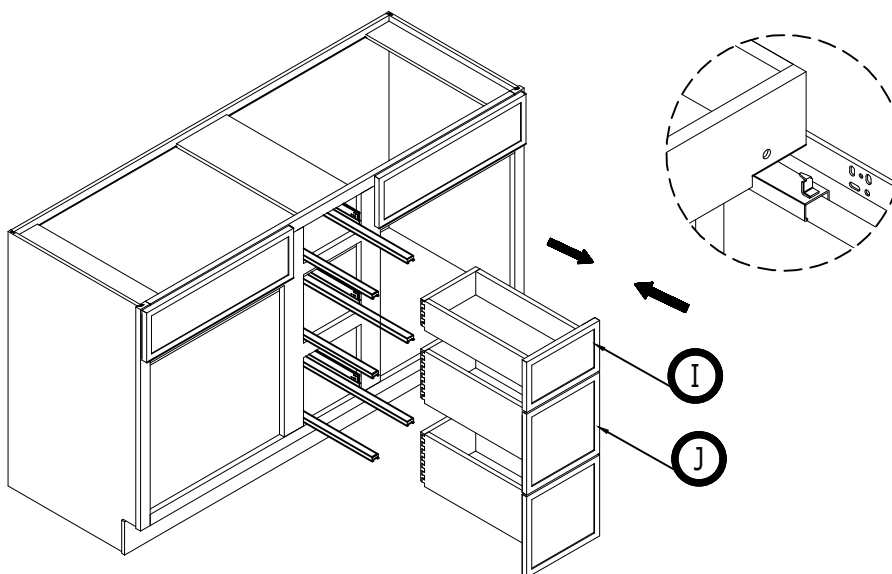


Installing the drawer into the cabinet: To move out the slide and put drawer to click into the hook of slide with the hole in back side of drawer back.

Step 11

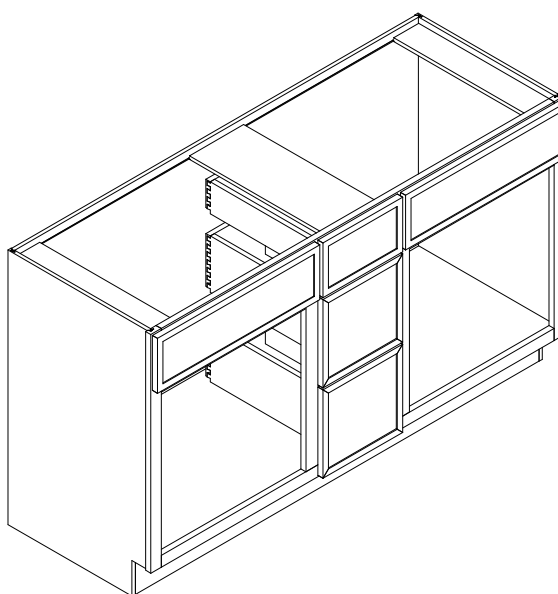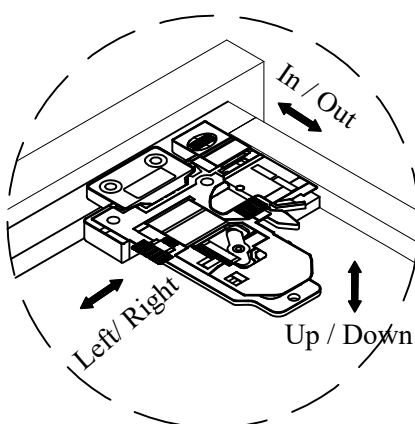


3D locking device can just the drawer up/down, left/Right or In/Out.

Step 12

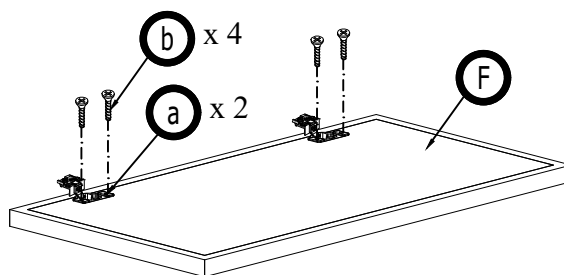

Installing the Hinges(a) into the door(F) and assemble screw (b).

Step 13

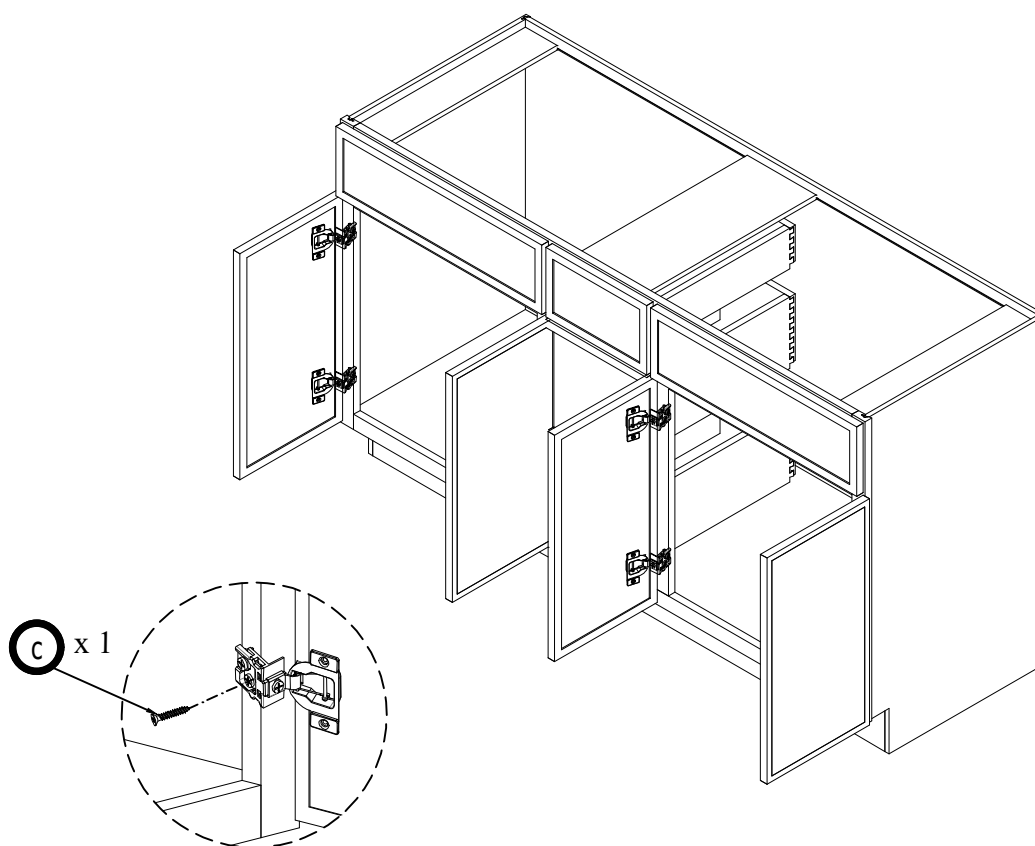

Installing the door (F) with hinges into the front frame of cabinet and assemble screw (c).