



Base Cabinet ASSEMBLY INSTRUCTIONS

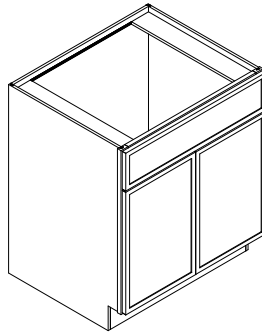

VSB242134 VSB272134
VSB302134 VSB332134

Item quantity and hardware list.

A LEFT SIDE PANEL x1 RIGHT SIDE PANEL x1	B BACK PANEL x1	C BOTTOM x1	D TOE KICK x1	E FRONT FRAME x1
F DOOR x2	G CLEAT x2			
a HINGE OVERLAY 1-1/4" x4	b 12mm Flat head screw x8 (To install the hinges on the door)	c 20mm Flat head screw x4 (To install the hinges on the front frame)		



Note: Before assembly, please ensure that all plastic inserts are fully pushed in.

Note:

Remove hardware from box and sort by size


Please check to see that all hardware and parts are present prior start of assembly

Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.

Please keep all hardware out of reach small children.




Step 1

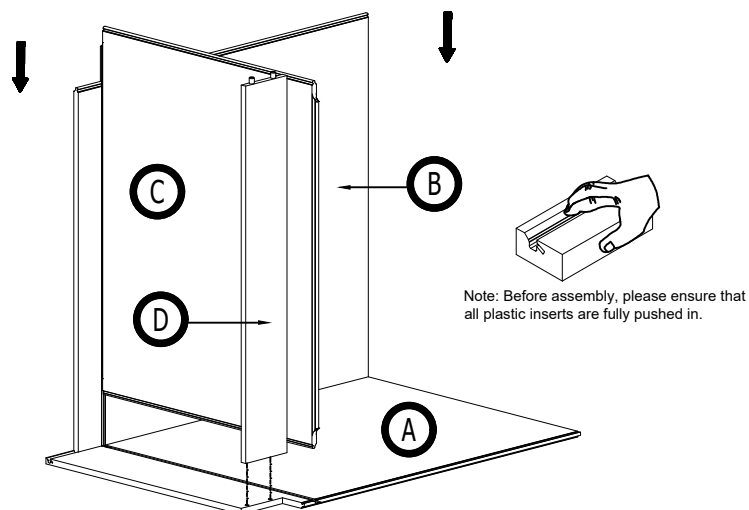


Insert the back panel (B), the bottom (C) and Toe kick (D) into the groove of the side panel (A) and click it into place.

Step 2

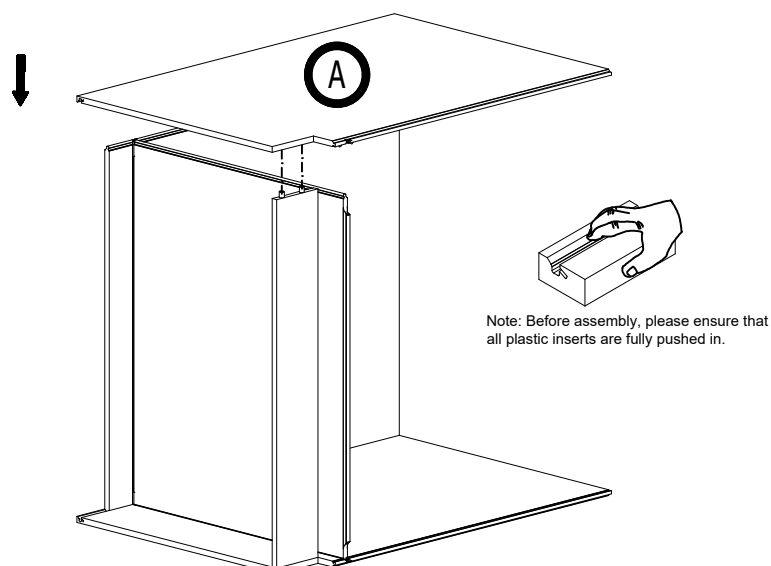


Insert the side panel (A) into the groove of back panel (B), the bottom (C) and Toe kick (D) and click it into place.

Step 3

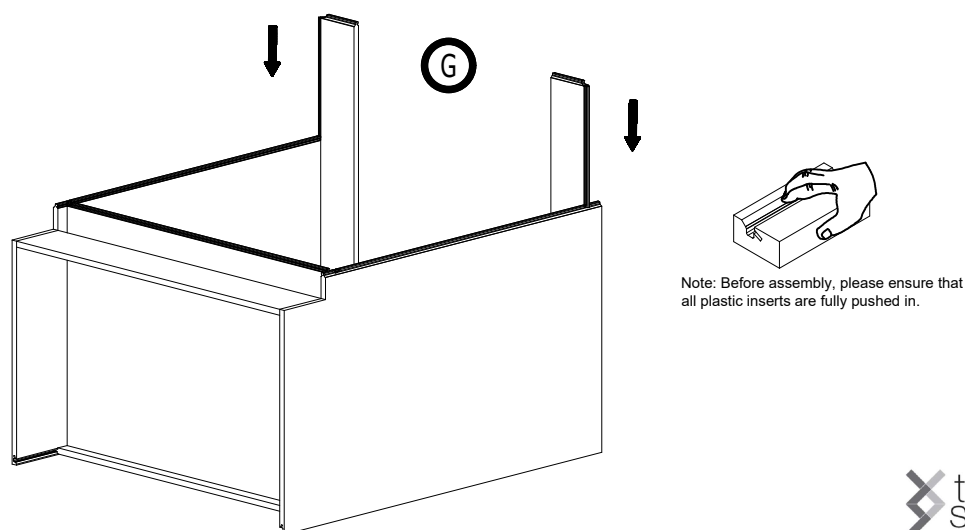


Insert the Cleats (G) into the groove of side panel (A) and back panel (B) and click it into place.

Step 4

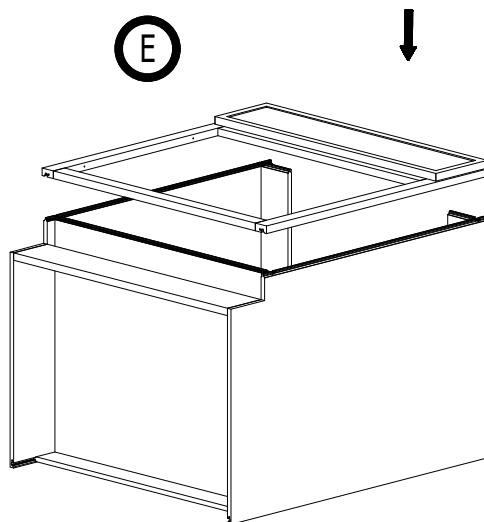


Insert the front frame (E) into the groove of the side panel (A), bottom (C) and cleat (G) and click it into place.

Step 5

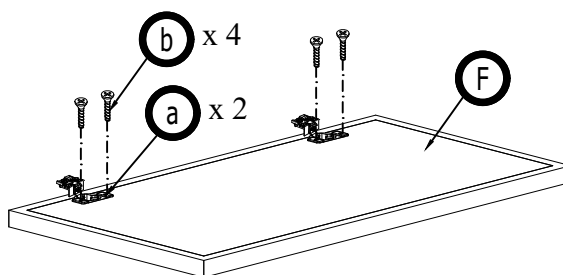

Installing the Hinges(a) into the door(F) and assemble screw (b).

Step 6

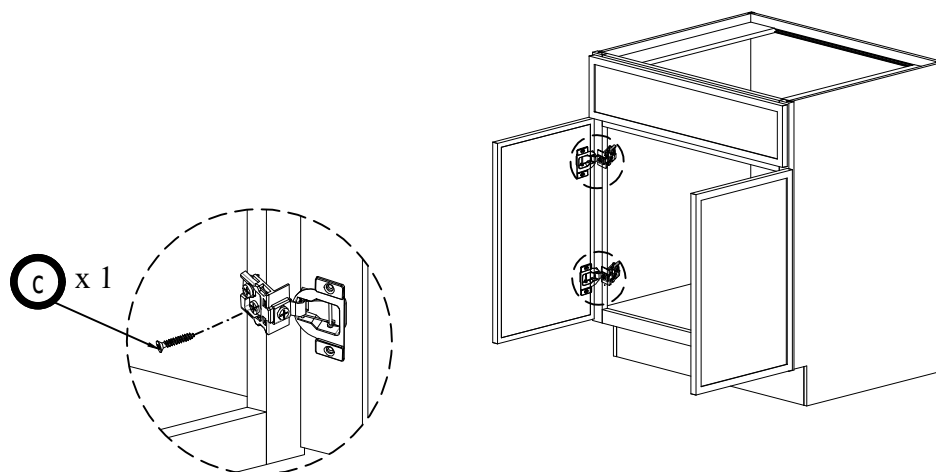

Installing the door (F) with hinges into the front frame of cabinet and assemble screw (c).