


## BATH AND DRYER VENT INSTALLATION INSTRUCTIONS

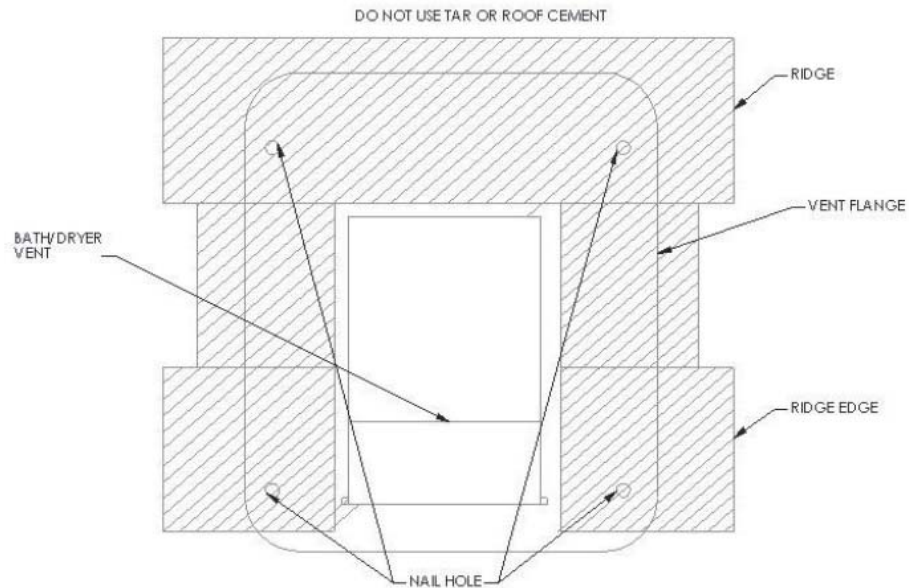

1. Secure vent with appropriate nails in nail holes.
2. Make sure **all** nail holes are covered by roofing material.
3. Cover as much of the Vent Flange as possible with the roofing material, especially the bottom two corners.
4. **VERY IMPORTANT!** When nailing or stapling the roofing material around our vent **DO NOT LET FASTENERS PENETRATE THE VENT FLANGE.**
5. Do not apply tar or any other asphalt based sealant to the vent. The plastic vents are designed to naturally conform to the surface, and do not require a sealant when installed properly.

**Please Note:** Air Vent, Inc. cannot be held responsible for failure to fasten vents in the designated areas, or any other non-compliance with the above instructions.