

THE ULTIMATE[®] PIPE FLASHING

CAUTIONS

- When removing the Ultimate Pipe Flashing from the carton take care to not cut or damage the silicone rubber boot.
- Use the provided lubricant wipe for intended use only.
- Do not ingest wipe or lubricant. Keep away from eyes. Keep away from children.
- Ensure compression collar is in place.

INSTRUCTIONS

1. Open the lubricant wipe affixed to the flashing part. Use the wipe to apply lubricant to the inside surface of the boot neck.
2. Then take the wipe and apply lubricant to the exterior surface of pipe.
3. Install the Ultimate Pipe Flashing over the pipe (collar should remain in place on the boot during installation). Press downward firmly on the top surface of the compression collar to fully seat the flashing plate onto the roof surface.
4. Nail the flashing down using only the slots provided.
5. Check the boot neck to ensure correct placement, silicone rubber should be in a relaxed condition beneath the compression collar.



For help with installation see us on Youtube @ Lifetime Tool or at LIFETIMETOOL.COM

IMPORTANT

For Use With PVC & ABS Plastic Pipes
For ALL Other Pipes, Combine With
EASYFit™ or **EASYSleeve®**

➤1.

Use the wipe to apply lubricant to the inside surface of the boot neck.

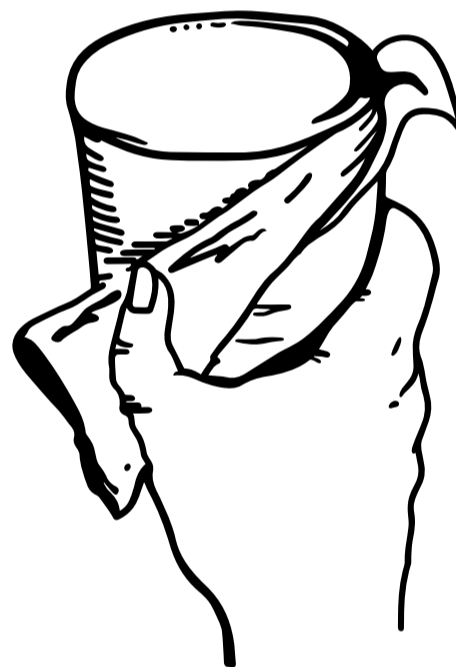
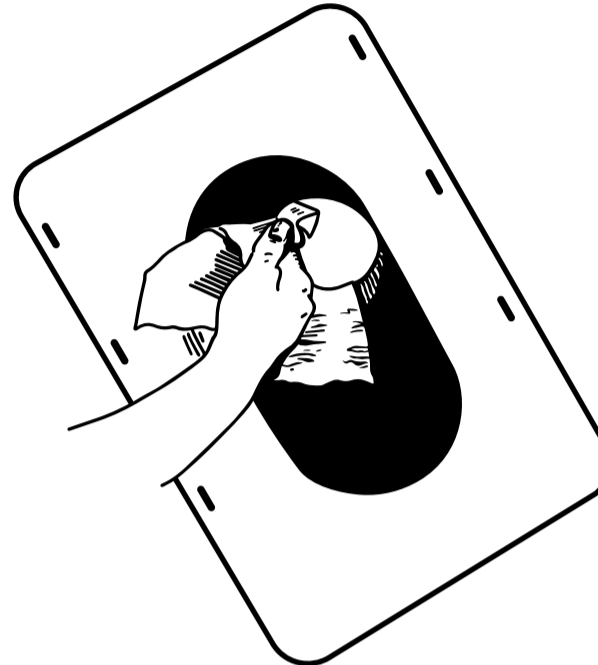


➤2.

Then take the wipe and apply lubricant to the exterior surface of pipe.

➤3.

Install the Ultimate Pipe Flashing over the pipe. Press downward firmly on the top surface of the compression collar to fully seat the flashing plate onto the roof surface.

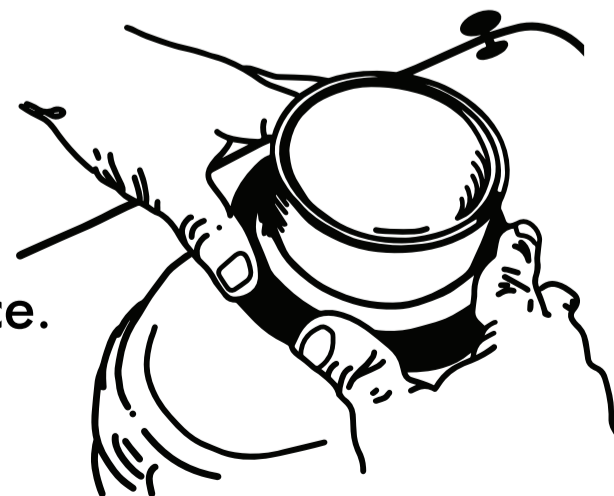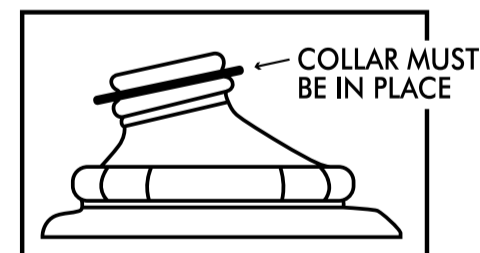

**LIFETIME TOOL
& BUILDING
PRODUCTS LLC**
LIFETIME ROOF SYSTEM COMPONENTS

LIFETIMETOOL.COM

877.904.1002

PRECAUCIONES

- Al retirar el Ultimate Pipe Flashing de la caja, cuidado de no cortar ni dañar la funda de caucho de silicona.
- Use la toallita lubricante proporcionada únicamente para el uso previsto.
- No ingiera toallitas o lubricantes. Manténgase alejado de los ojos. Aléjate de los niños.

INSTRUCCIONES

1. Abre la toallita lubricante adherida a la parte tapajuntas. Usa la toallita para aplicar lubricante a la superficie interior del cuello de la bota.
2. Luego usa la toallita para aplicar lubricante a la superficie exterior de la tubería.
3. Instale el tapajuntas sobre la tubería (el collar debe permanecer en su lugar en la tubería durante la instalación). Presione firmemente hacia abajo en la superficie superior del collar de compresión para asentar completamente el tapajuntas en la superficie del techo.
4. Clave el tapajuntas usando solo las ranuras provistas.
5. Revise el cuello de la bota para asegurarse de que esté colocado correctamente, la goma de silicona debe estar relajada debajo del collar de compresión.