
Snap Stand Wheel Kit Installation Instructions

Step 1

Insert the wheel assembly into the leg of the Snap Stand as shown in the figure at right. Tap the bracket with a hammer to wedge it tightly into the leg. Repeat this process for the other leg.



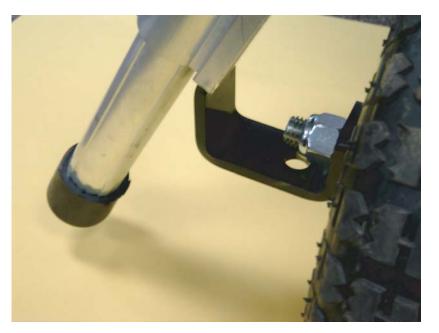

Step 2

To prohibit the stand from rolling on the wheels, lock the leg extensions into one of the bottom two locking positions. See figure at left. If the leg extensions are in one of the other 3 positions, the wheels are in contact with the ground and are free to roll.

Step 3

To remove the wheel assembly, tap the bracket downward with a hammer to disengage.

